

PLEASE READ THE FOLLOWING PRIOR TO OPERATION OF THIS EQUIPMENT!

The following are basic safety precautions to understand when operating this rubber track dumper. It is NOT intended to be a complete list of safety precautions. Please review the Operator Manual prior to operation. If one is not on the machine, contact All Star Rents and we will supply one to you. DO NOT OPERATE (or allow others to operate) UNIT WITHOUT READING MANUAL!

Basic Operation & Safety Requirements



This symbol means: **Attention! Be Alert! Your safety is involved!** The safety alert symbols found on decals and in the Operator Manual alert you to potential safety hazards. Obey all safety messages with this symbol to avoid possible injury or death.

Other similar symbols: **⚠️ WARNING** **⚠️ DANGER** **⚠️ CAUTION**



Refer to the Operator Manual for all operational or safety questions you may have. Contact All Star Rents prior to operation if one is not located on the machine. This machine can be very dangerous if the safety precautions in this manual and on the labels attached to this machine are not followed. Read and understand this manual and the safety labels on the machine thoroughly before using this machine. Always follow the instructions and safety precautions, or serious injury or death could result.

- The operator is responsible for the accidents or hazards caused to other people or their property. • Do not carry passengers other than the operator.
- Always keep in mind that care and concentration is required when working with ride-on machines.
- Loss of control on a slope cannot be regained by the application of the brake. The main reasons for loss of control are:
 - insufficient grip of tracks.
 - excessive speed.
 - misjudging of the ground conditions, especially slopes.
 - incorrect distribution of load.
- The stability of the machine is affected by the speed, rate of steering, terrain and the load. Always pay close attention to these factors or a loss of control or tip over could occur, resulting in property damage, serious injury or death.
- On a slippery surface, travel slowly and exercise caution to reduce the chance of skidding or sliding out of control. Never operate on ice.
- Always follow proper procedures for driving on a slope as described in the manual.
- Never move the throttle lever or the control stick suddenly.
- Driving on a slope can be dangerous. It can result in a tip over and cause serious injury or death. Take the following precautions:
 - Without a load, drive the machine backwards up a slope (operator's step uphill) when climbing, and drive it forward when going down a slope.
 - With a load, drive the machine forward up a slope (operator's step downhill) when climbing, and drive it backwards when going down a slope. Be especially cautious when operating on a slope with a load.
- The maximum payload for this machine is 1650lbs. (750 kg). Do not exceed this maximum payload under any circumstance.
- Do not operate on a slope steeper than 20 degrees when carrying a load. Do not carry more than 660lb (350 kg) when operating on a slope between 15 and 20 degrees. Keep in mind that liquid concrete will shift in the bucket and hence its center of gravity also shifts, affecting the stability of the machine.
- Perform the dump operation on a flat, level and stable surface whenever possible. Raising or lowering the load deck on a slope or rough terrain could result in a tip over.

Be aware of others around you. Maintain a safe distance from bystanders at all times. Always look in the direction of travel. Buckets and other implements present crushing and impact injury danger.



Contact All Star Rents immediately if you have any problems with the machine. DO NOT attempt to repair, upright or start the machine if it has tipped over. Doing so could result in further injury or damage to the equipment. Call 911 first if serious injury as occurred while operating the tractor.

All Star Rents Toll Free: 866-ALL STAR